


TWIN STROLLER

Model:S600T


IMPORTANT

Keep these instructions for future reference. Your child's safety may be affected if you do not follow these instructions.

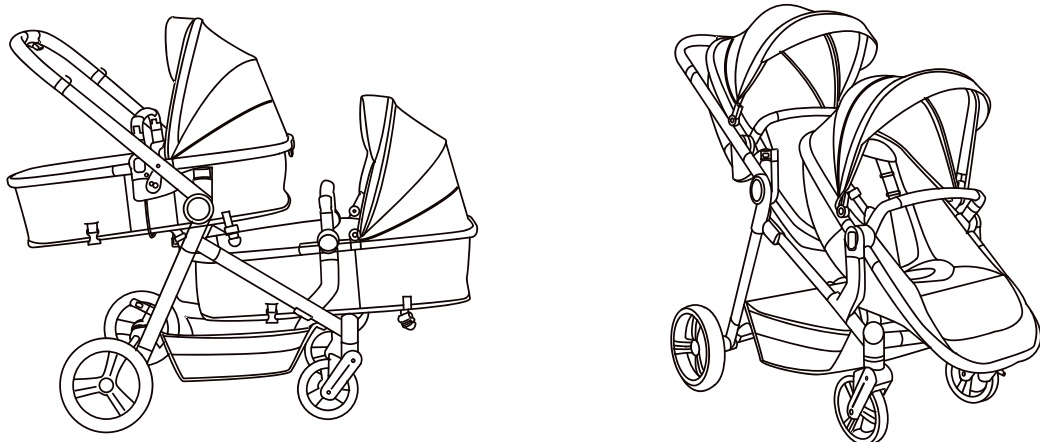

Carry Cot Mode: This product is suitable for a child who cannot sit up unaided, roll over and cannot push itself up (up to 20lbs) on its hands and knees. Maximum weight of the child: 20lbs.
Stroller Mode: Intended for children from 6 months up to 33lbs or 3 years whichever comes first.

Seat unit installation

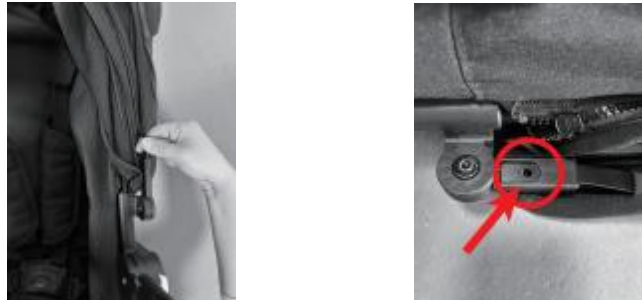

Insert the stems of the canopy into the hole of the plastic holders and push down. Ensure the bumping are visible through the hole.



Press in the button on the back of seat (just behind the hood) to ensure the seat unit adaptors are on the same line.

·CARRY COT MODE: **⚠ WARNING:** This product is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 20lbs!
·Whilst the product is in Carry Cot Mode, the harness may be removed if desired. Should you choose to use the harness in this mode, the safety guidance must be followed for babies from 0-6 months.
·Removing the Harness for Carry Cot Mode:
To remove the harness for Carry Cot mode, locate the buckles at the back of the seat and thread each of them through the openings in the hard base and pull through the front of the seat fabric. To reinstall, repeat the process in reverse, and ensure that each harness belt is secured.

·If using the harness in this mode: **⚠ WARNING!** For babies aged 0-6 months the harness must be fed through the retaining holes to prevent risk of strangulation.
·For new born babies we recommend using the stroller in Carry Cot Mode as this provides the most reclined seat back position. Never use the detached seat unit (in pram mode) as a carry cot.
·Never change the seat unit into Carry Cot Mode with your child in the seat unit.

· **⚠ WARNING!** When in Carry Cot Mode do not use an additional mattress.

⚠ WARNING Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless adjust the seat unit to a horizontal position and ensure the two buckles on the lower half of the seat are not connected. Meantime release the butterfly clasp on the back of the seat to the lowest area.

⚠ WARNING When used as a bassinet mode, please ensure the bassinet is installed backward, facing with Mom.


⚠ WARNING When used as a single stroller, please make sure the third position (horizontal position) is not allowed to be used when in seat mode.

9

SAFETY WARNINGS:

- ⚠ WARNING** Never leave your child unattended.
- ⚠ WARNING** To avoid injury ensure your child is kept away when unfolding and folding this product.
- ⚠ WARNING** Do not let your child play with this product.
- ⚠ WARNING** Avoid serious injury from falling or sliding out. Always use seat belt
- ⚠ WARNING** Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
- ⚠ WARNING** This product is not suitable for running or skating.
- ⚠ WARNING** Your child's safety is your responsibility.
- ⚠ WARNING** Any load attached to the handle affects the stability of the pram / pushchair.
- ⚠ WARNING** Check that the pram body or seat unit attachment devices are correctly engaged before use.
- ⚠ WARNING** Use a harness as soon as your child can sit unaided.
- ⚠ WARNING** Ensure that all the locking devices are engaged before use.
- ⚠ WARNING** Parking device shall be engaged when placing and removing the children.
- ⚠ WARNING** The maximum load-bearing capacity of the baby stroller is 33lbs, which is suitable for children aged from 0-36 months.
- ⚠ WARNING** The maximum weight the cup holder can bear is 1.1lbs. Excessive weight may cause a hazardous unstable condition to exist
- ⚠ WARNING** Do not exceed the maximum load of 2 kgs in the shopping basket. (Where provided). Excessive weight may cause a hazardous unstable condition to exist
- ⚠ WARNING** This stroller is only for two children to use simultaneously.

8

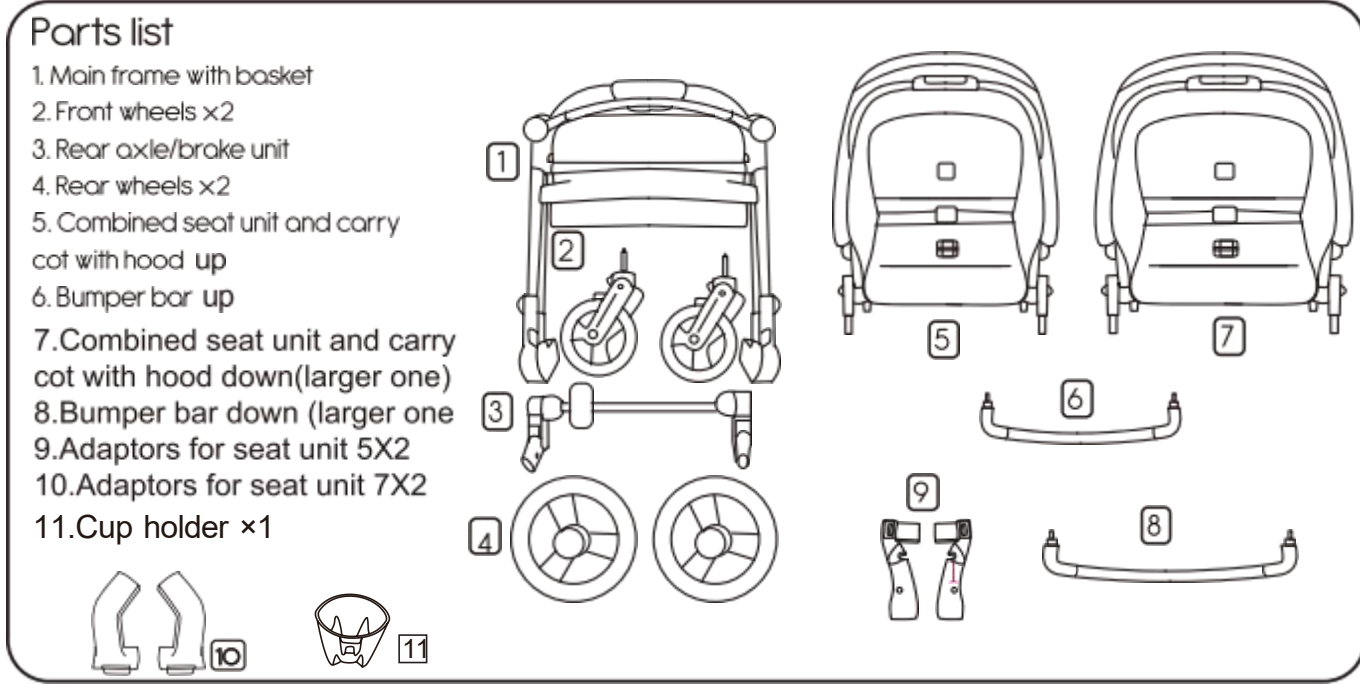

Assembly and usage instructions

To open the frame

- To open the frame, release the locking catch and lift the handle upwards until it locks in place. Fig 1

WARNING Ensure that all the locking devices are engaged before use.

To assemble the front wheels


- Insert the metal stem of the front wheels into the hole of the wheel holders and push upwards until it clicks in place. Fig 2a.

- To select a fixed or swivel wheel, slide the lock to the side. To remove the wheel, push in the button and pull the wheel down. Fig 2b.

To assemble the rear wheels / broke unit

- Attach the rear axle / broke unit on to the rear legs. Fig 3a.

- Ensure the silver push pins are visible through the hole. Fig 3b.

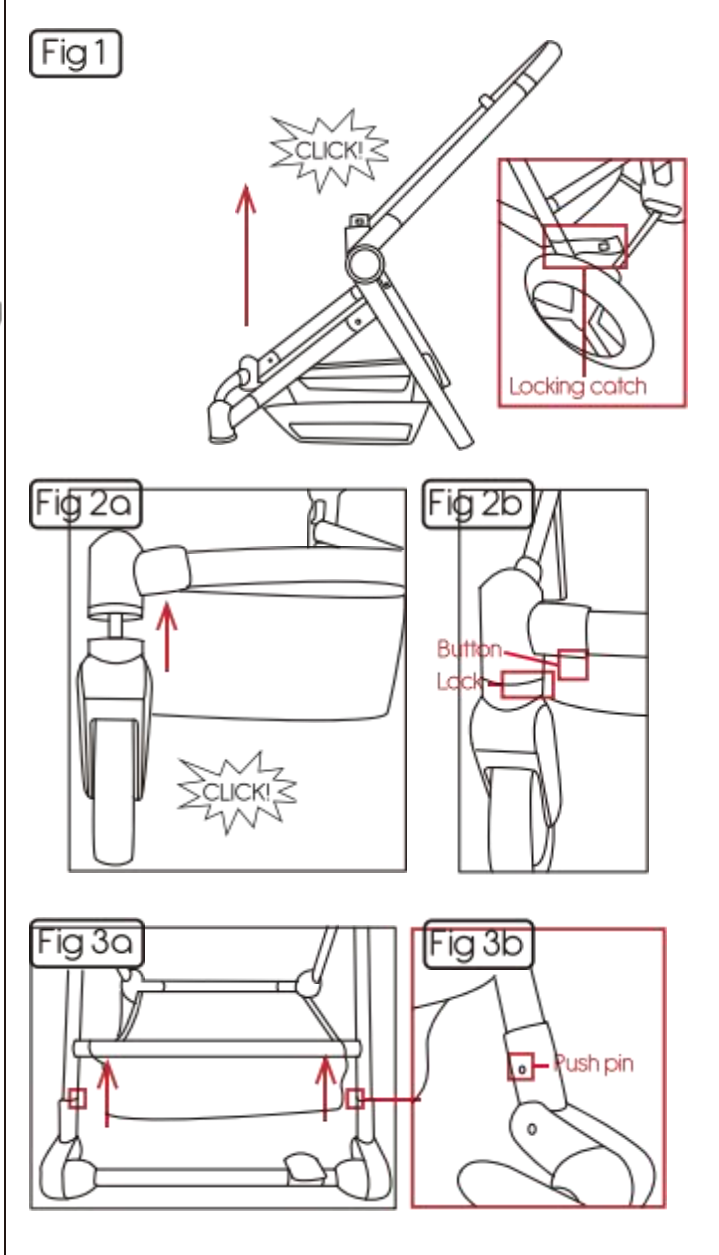

1

Push the stems of the rear wheels into the axle unit until they lock in place. To remove the wheel, pull down on the clip and remove the wheel. Fig 3c.

To operate the brakes

To operate the brakes, push down with your foot on the rear of the brake pedal and push forward on the front of the pedal to release them. Fig 3d.

WARNING Apply all the brakes whenever you park the stroller.

To attach the seat unit

- Before attaching the seat unit to the main frame, ensure the metal bar is underneath the Velcro flap. Fig 4a.

Single stroller modes

Click the button on seat 7 to open the seat and mount it to the main frame

Twins/Second child modes

Attach the adaptors 9&10 to the main frame then lock the adaptors 9. Fig 4b

Insert the seat unit adaptors into the brackets on each side of the frame and press down.

Now, open the seat frame until it is flat and locked in place. Fig 4c Seat 5 is installed above Seat 7


To remove the seat unit, pull up the catches on both sides of the adaptors and lift upwards. Fig 4c.

To attach or remove the bumper bar

Insert the ends of the bumper into the holes on top of the seat adaptors and press down until it clicks in place.

To remove the bumper bar, press in the button and lift up. Fig 4d.

Attach the cup holder to the handle. Fig 4e.

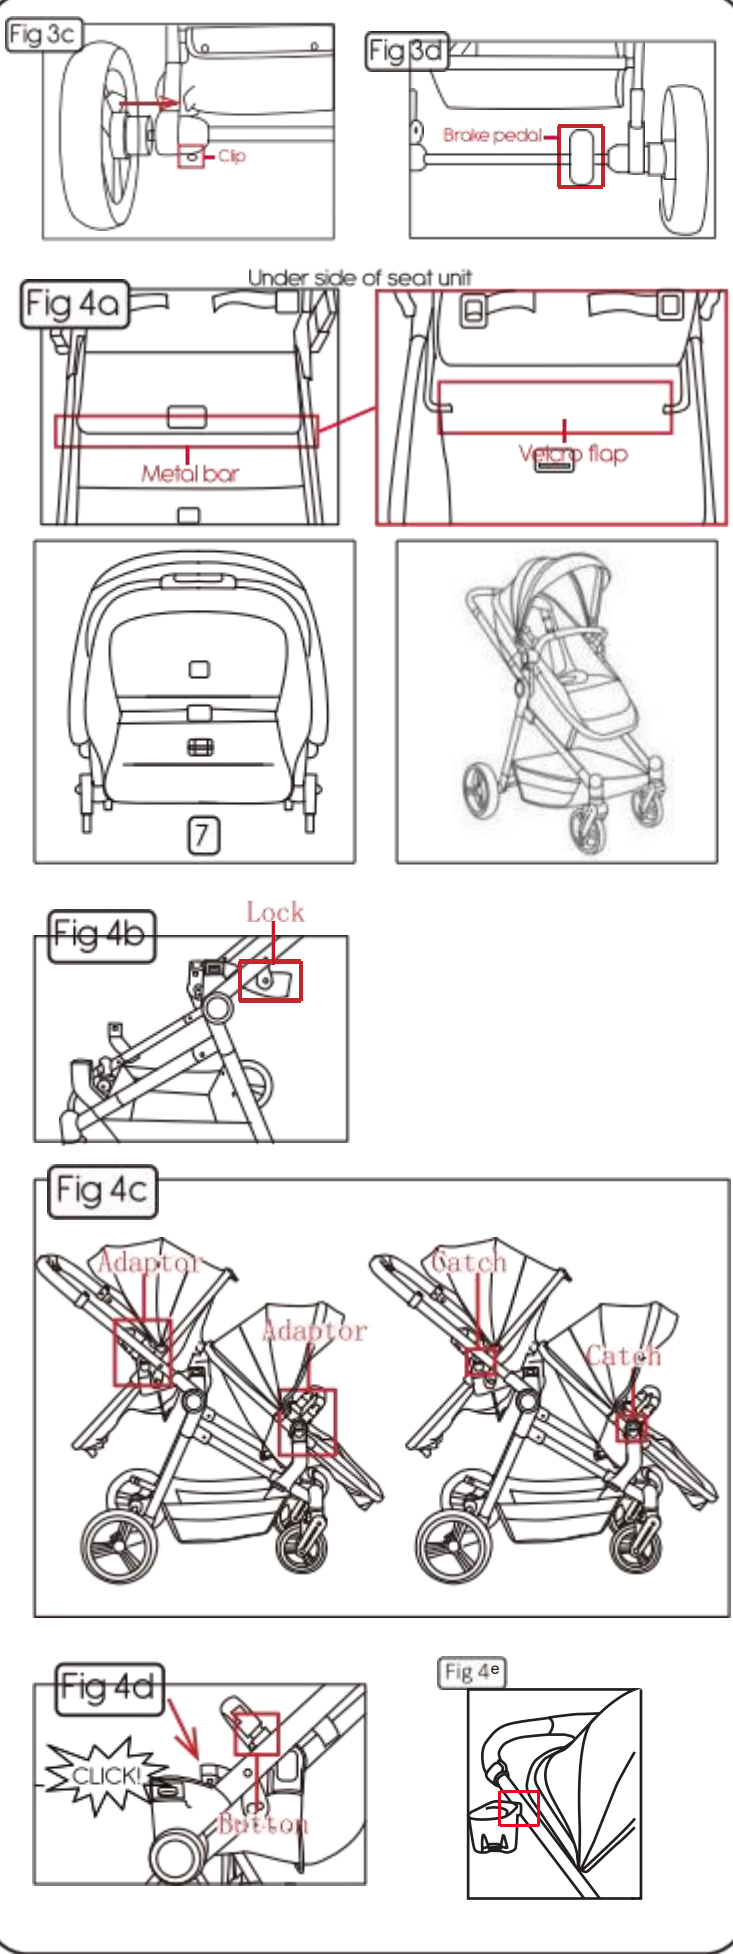

2

General care:

- The correct use and maintenance of this stroller is essential.
- Do not use excessive force when folding the stroller.
- If you are having problems, fully open the stroller and repeat the folding procedure.
- Always let wheels down as gently as possible when mounting and dismounting kerbs.
- Always fold the stroller when going up or down stairs.
- Never bump the stroller over these or similar obstacles.
- In some climates mould and mildew can affect the fabric and rain cover. To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.
- Always store the stroller in a dry place.
- When storing the stroller in the car, never place other items on top of it.

Cleaning:

- Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight.
- Avoid leaving your stroller in direct sunlight for prolonged periods of time as this may cause fabrics to fade.
- Do not dry clean, machine wash or tumble dry.
- Metal parts may be cleaned with a damp cloth, wipe dry.
- Clean plastic parts with a mild soap and water solution, wipe dry.

Maintenance:

- Maintain your stroller by lubricating all metal moving parts with a silicone based spray. Do not use heavy machine oil or grease as this can attract dirt or grit.
- Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.
- Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.
- Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

7

·STROLLER MODE: **⚠ WARNING**

- This seat is not suitable for children under 6 months.
- Not intended for children weighing more than 33lbs.
- The brake must always be engaged when placing and removing children from the stroller.
- Any load attached to the handle and/or on the backrest and/or on the sides of the vehicle will affect the stability of the stroller.
- Lift a child in and out of the stroller. Do not allow a child to stand on the footrest or seat.
- Do not use accessories that have not been approved by the manufacturer.
- Never use the stroller to carry a child up and down stairs or escalators.
- Unstable hazardous conditions may exist if package carrying accessories are added onto the product.

Stroller Important Safety Information:

- Seat unit intended for children from birth upto 33lbs, Use in Carry Cot Mode for babies aged 0-6 months (up to 20lbs) and in Stroller Mode from 6 months until 33lbs or 3 years of age (whichever comes first).

- The fixed wheel function makes using the stroller on uneven terrain easier. However, the stroller must never be used on sand as this will severely damage the bearings in the wheels.
- The height of the shoulder straps can be adjusted by feeding the harness through the cut out holes located on the seat unit.
- Take extra care in windy conditions.

- Before folding the stroller check the following:
A Your child is clear of moving parts
B The rear brakes have been applied
C The front wheels are secured in the locked mode
D The seat unit or car seat has been removed
E All items have been removed from the basket
F Never attempt to close or fold the stroller with the child inside

6

To adjust the seat unit
To adjust the angle of the frame of the seat unit press in the button on the back of seat (just behind the hood). Fig 5a.
To lower only the backrest, squeeze the butterfly clasp on the back of the seat and pull down to desired position.
To raise the backrest, hold the end of the strap, squeeze the clasp and push it forward. Fig 5b.

Carry Cot Mode

- For carry cot mode ensure the seat unit / carry cot frame is reclined to a horizontal position. Ensure that the two buckles on the lower half of the seat are not connected. Fig 6.


NOTE: It is recommended that when in carry cot mode for newborn that the harness is removed. Locate the ends of the harness buckles, turn them sideways and pass them through the slots in the seat unit.

Stroller Mode

- To change to Stroller mode, connect the two buckles and raise the seat and frame to desired positions. Fig 7.

To operate the hood

- To adjust the hood, simply push or pull the front of the hood backwards or forwards. Fig 8.

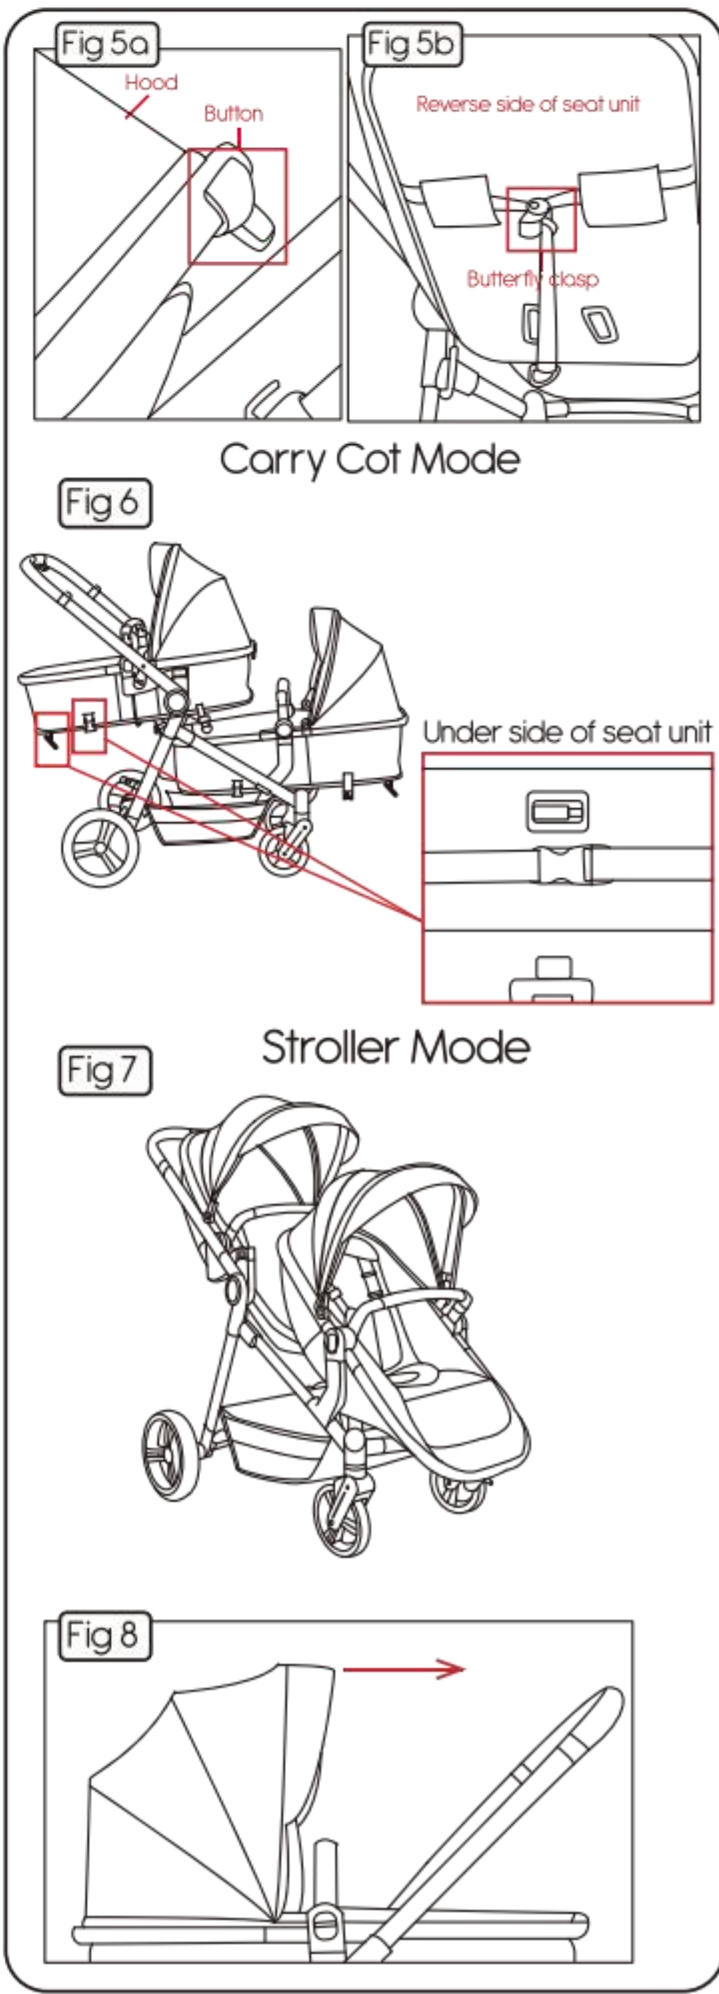

3

To fold the stroller

- Ensure the front wheels are selected in swivel mode. Adjust the angle of the seat so the frame is parallel with the main stroller handle. Fig 10a.

Pull the stroller backwards a little so the front wheels are facing backwards.

Slide the button to the side and squeeze the trigger to drop the handle towards the floor. The locking catch will engage automatically. Fig 10b.

Your folded stroller will now look like this. Fig 10c.

NOTE: To achieve the optimum storage size, releasing the Velcro on the back of the seat unit (with the bar underneath) allows the seat to be folded more compactly.


To adjust and secure the harness

To adjust and secure the harness

Slide the shoulder strap (A) on to the waist strap (B) and then push the forked clip in to the central buckle - housing (C). The harness can be made looser or tighter using the sliders on each strap.

To release the buckles simply push the button in the centre of the buckle housing. Fig 11.

WARNING : Always use the catch strap in combination with the waist belt.

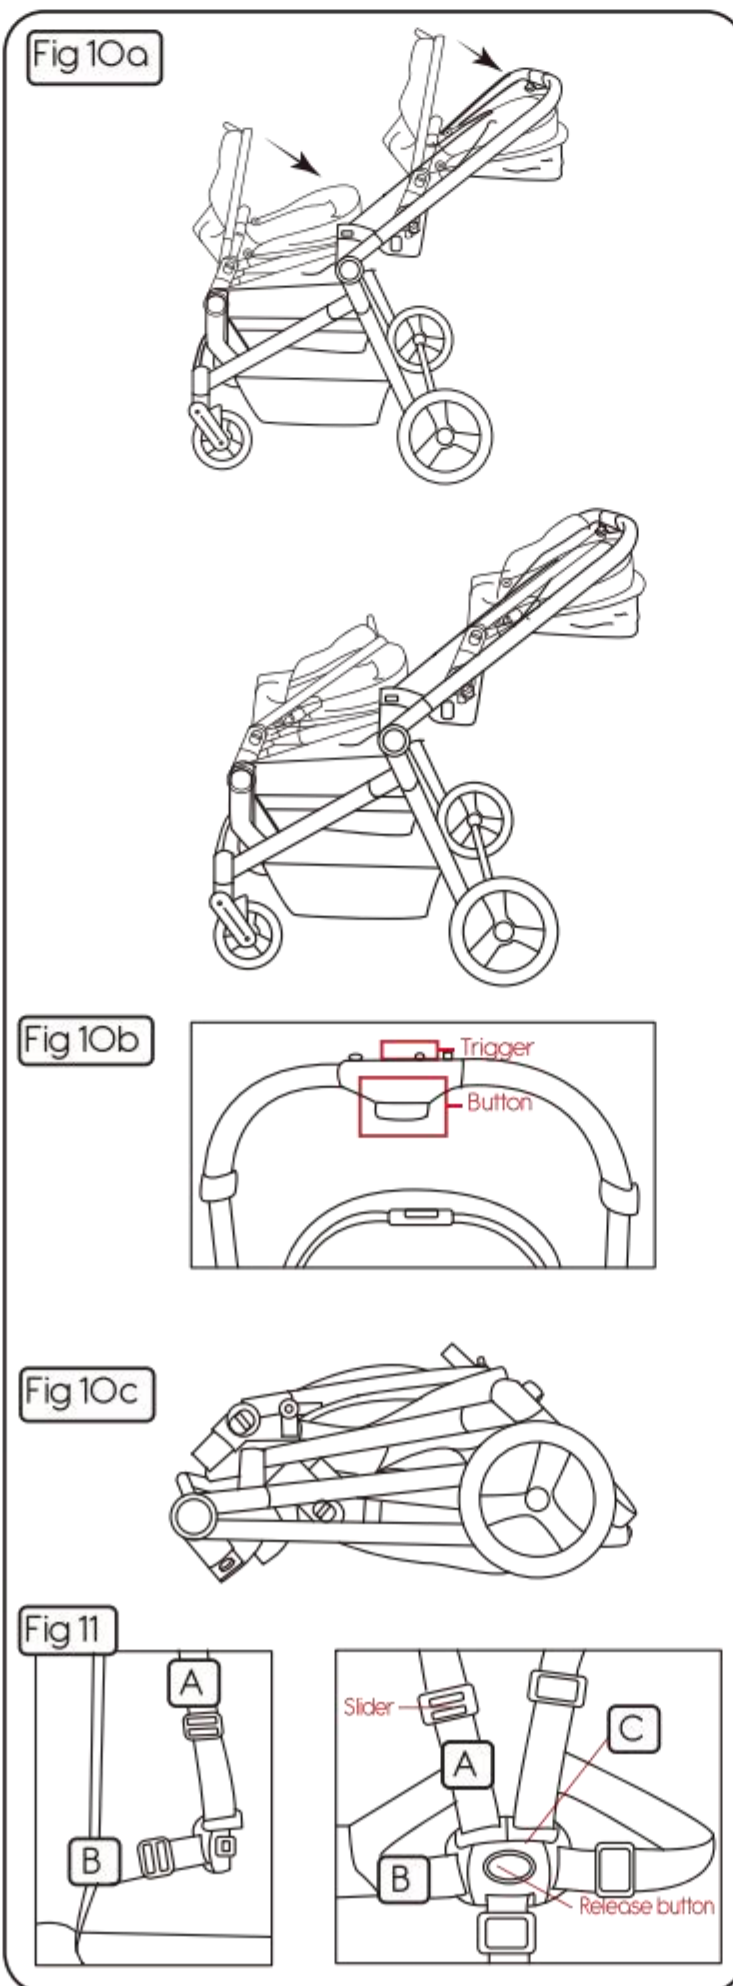

4

This product has the following usage modes:



When used as a bassinet mode, please ensure the bassinet is installed backward, facing with Mom.

When used as a single stroller, please make sure the third position (horizontal position) is not allowed to be used when in seat mode.

When used with two seats, please make sure to fix the buckle on the seat unit to the buckle on the frame in order to avoid collision of the seat units when adjusting the seat angle of seat unit.



5